


SS-10 7-Inch Speaker Stands

Your Optimus SS-10 7-Inch Speaker Stands are easy to assemble. They can improve your speakers' sound and appearance by raising them 7 inches off the floor.

You need a hammer and a #2 Phillips screwdriver (not supplied) to assemble these speaker stands.

Warning: Use extreme caution when using a speaker stand around small children. Ensure that the speaker is seated securely on the stand and the stand is stable at all times.

PARTS

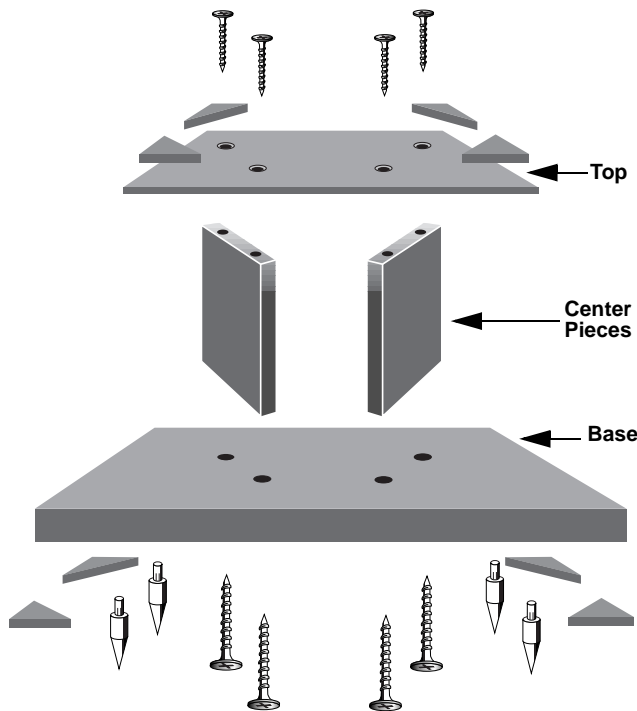

Quantity	Description
8	1 ⁵ / ₈ -Inch Screw
16	Isolation Pad
2	Top
4	Center Piece
2	Base
8	Spike Foot
8	2 ¹ / ₄ -Inch Screw

INSTALLING THE SPIKE FEET OR ISOLATION PADS

Place the base on a flat surface with the bottom (unfinished side) facing up.

If you plan to place your speaker stands on carpet, install the supplied spike feet. Besides making the stands more stable, spike feet can also noticeably improve sound, with "tighter" sounding bass, clearer, more defined mids and highs, and enhanced spatial imaging.

Place the flat end of a spike into the hole in each corner of the base and hammer each spike into the base up to its shoulder.

Otherwise, use the supplied isolation pads to protect bare floors from being damaged by the speaker stands. Simply remove the paper backing from four of the triangular isolation pads and place a pad 1/8 inch from each corner on the bottom (unfinished side) of the base.

ASSEMBLING THE STANDS

Follow these steps to assemble each stand.

1. Turn the base on its side with the unfinished side facing you.
2. Align the two holes in one of the center pieces with the matching holes on the finished side of the base.
3. Thread a 2¹/₄-inch screw through the base and into the center piece, then use a Phillips screwdriver to partially tighten them.
4. Repeat Steps 2 and 3 for the other center piece.
5. Set the base on the floor with the top (finished side) facing up.
6. Align the four holes in the top piece with the matching holes in the mounted center pieces.
7. Thread a 1⁵/₈-inch screw through the top piece and into the center piece, then use a Phillips screwdriver to partially tighten them.
8. Align the top and base of the stand by setting the stand on its side on a flat surface. Then tighten all screws securely.

-
9. Remove the paper backing from four more triangular isolation pads and place a pad $\frac{1}{8}$ inch from each corner on the top of the speaker stand to protect the bottom of your speaker.

POSITIONING THE SPEAKER STANDS

Place your speakers on the assembled stands and position the speakers where you get the best sound.

For the best stereo image, place a pair of speakers so the distance between them is about the same as the distance between the listening area and the point halfway between the speakers.

If you must place the speakers farther apart, turn them slightly inward. If you must place them closer to each other, turn them slightly outward. You might want to experiment with your speakers' placement to discover the best location for them.



RadioShack
A Division of Tandy Corporation
Fort Worth, Texas 76102

Limited Ninety-Day Warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for ninety (90) days from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow the limitations on how long an implied warranty lasts or the exclusion of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

RadioShack Customer Relations, Dept. W, 100 Throckmorton St., Suite 600, Fort Worth, TX 76102

We Service What We Sell

3/97

RadioShack
A Division of Tandy Corporation
Fort Worth, Texas 76102